



Item No.	Type	Sub	Part No.	Description	Qty	Unit
1	1	*	SE00000145	CIRCUIT BOARD A ASSY	1	PC.
		INC.	* SE00000146	CIRCUIT BOARD A	1	PC.
		INC.	* SE00000142	CIRCUIT BOARD A JACK	1	PC.
		C01	* SE00000143	CIRCUIT BOARD A SPEAKER WIRE	1	PC.
		INC.	* SE00000144	VOLTAGE DETECT SWITCH ASSY	1	PC.
	2	*	SE00000266	CIRCUIT BOARD A ASSY	1	PC.
		INC.	* SE00000267	CIRCUIT BOARD A	1	PC.
		INC.	* SE00000268	CIRCUIT BOARD A JACK	1	PC.
		C01	* SE00000269	CIRCUIT BOARD A SPEAKER WIRE	1	PC.
		INC.	* SE00000270	VOLTAGE DETECT SWITCH ASSY	1	PC.
		INC.	* SE00000220	CIRCUIT BOARD C (Added)	1	PC.
2			SE09163102	SCREW M3X10	5	PC.
3			SE00000156	CIRCUIT BOARD C ASSY	1	PC.
			SE00000299	CIRCUIT BOARD C ASSY	1	PC.
4			SE09163102	SCREW M3X10	6	PC.
5			SE09090011	SCREW 1.7	13	PC.
6			SE020PC020	POWER BUTTON HOLDER	1	PC.
7			SE00000157	POWER BUTTON (GRY)	1	PC.
8			SE020PC030	PRESET BUTTON HOLDER	1	PC.
9			SE00000158	PRESET BUTTON (GRY)	1	PC.
10			SE09064161	SCREW M4X16	1	PC.
11			SE09163102	SCREW M3X10	2	PC.
12			SE09064161	SCREW M4X16	2	PC.
13			SE00000204	FRONT CABINET ASSY	1	PC.
15			SE09064161	SCREW M4X16	1	PC.
16			SE00000159	FRONT BUMPER	1	PC.
17			SE0338PC5Z	FRONT BAR	2	PC.
18			SE00000160	SCREW PTHE6X47(CR)	4	PC.
19			SE00000161	ROTARY KNOB	1	PC.
20			SE21B1110A	ROTARY KNOB RING	1	PC.
21			SE0335PC5Z	JACK COVER	1	PC.
22			SE09173106	HEX SCREW M3X10	1	PC.
23			SE00000162	BATTERY COVER BUMPER	1	PC.
24			SE09176166	HEX SCREW M6X16	2	PC.
25			SE09176166	HEX SCREW M6X16	2	PC.
26			SE00000165	REAR BUMPER	1	PC.
27			SE00000166	BATTERY COVER	1	PC.
28			SE09163102	SCREW M3X10	2	PC.
29			SE00000168	PACKING	1	PC.
30			SE00000169	SUPPORT BAR	1	PC.
31			SE00000170	SPRING-L	1	PC.
32			SE00000171	SPRING-R	1	PC.
33			SE09163102	SCREW M3X10	2	PC.
34			SE00000173	SPRING HOLDER-R	1	PC.
35			SE09163102	SCREW M3X10	2	PC.
36			SE00000175	SPRING HOLDER-L	1	PC.
37			SE0307PC5Z	BACK UP BATTERY COVER	1	PC.
38			SE021E9010	BATTERY CONTACT (+)	1	PC.
39			SE021E9020	BATTERY CONTACT (-)	1	PC.
40			SE021E9030	+/- BATTERY CONTACT ASS'Y	1	PC.
41			SE09163452	SCREW M3X45	1	PC.
42			SE00000176	SCREW PTHE6X20(CR)	1	PC.
43			SE00000177	HANDLE HOLDER(R)	1	PC.
44			SE00000179	HANDLE	1	PC.
45			SE00000180	HANDLE HOLDER (L)	1	PC.
46			SE00000176	SCREW PTHE6X20(CR)	1	PC.
47			SE09176166	HEX SCREW M6X16	1	PC.
48			SE00000184	SPRING	2	PC.
49			SE09994007	STEEL BALL	2	PC.

Item No.	Type	Sub	Part No.	Description	Qty	Unit
50			SE09994007	STEEL BALL	2	PC.
51			SE00000184	SPRING	2	PC.
52			SE09176166	HEX SCREW M6X16	1	PC.
53			SE00000187	HANDLE SUS-PLATE (R)	1	PC.
54			SE09163452	SCREW M3X45	1	PC.
55			SE00000188	REAR CABINET	1	PC.
56			SE00000067	LOCKER HINGER	1	PC.
57			SE00000190	BATTERY COVER LOCKER	1	PC.
58			SE021PC050	LOCKER FIXER PIN 63.8	1	PC.
59			SE021PC040	LOCKER FIXER PIN 79.5	1	PC.
60			SE00000191	ROD ANT (BLK)	1	PC.
61			SE021J9032	ROD ANT HOLDER	1	PC.
62			SE024J9050	PACKING	1	PC.
63			SE00000192	HANDLE SUS-PLATE(L)	1	PC.
64			SE021P0020	NUT	1	PC.
65			SE021PC100	ROD ANT TERMINAL	1	PC.
66			SE00000193	SCREW 3X10	2	PC.
67			SE024J9030	PACKING	1	PC.
68			SE024J9070	PACKING	4	PC.
69			SE09090023	SCREW M4X12	4	PC.
70			SE00000205	SPEAKER NET ASSY	1	PC.
71			SE024J9090	PACKING	4	PC.
72			SE024J9040	PACKING	4	PC.
73			SE9076146A	HEX SCREW M6X14	4	PC.
74			SE023PC020	EVA 25X18X5.5	1	PC.
75			SE021J9010	SPEAKER HOLDER	1	PC.
76			SE024PC040	PACKING	1	PC.
77			SE00000195	W/TIES 100MM	1	PC.
78			SE09163102	SCREW M3X10	1	PC.
79			SE09163102	SCREW M3X10	2	PC.
80			SE00000098	CLUSTER BATTERY HOLDER	1	PC.
81			SE09163102	SCREW M3X10	2	PC.
82			SE00000197	TERMINAL D	1	PC.
83			SE00000193	SCREW 3X10	2	PC.
84			SE00000199	SILICON RUBBER WASHER	2	PC.
85			SE00000193	SCREW 3X10	2	PC.
86			SE09163062	SCREW M3X6	2	PC.
87			SE00000200	TERMINAL C	1	PC.
88			SE023PC020	EVA 25X18X5.5	2	PC.
89			SE02311000	SPACER (A)	1	PC.
90			SE021J9010	SPEAKER HOLDER	1	PC.
91			SE024J9030	PACKING	1	PC.
92			SE024J9070	PACKING	4	PC.
93			SE09090023	SCREW M4X12	4	PC.
94			SE024J9090	PACKING	4	PC.
95			SE00000205	SPEAKER NET ASSY	1	PC.
96			SE024J9040	PACKING	4	PC.
97			SE9076146A	HEX SCREW M6X14	4	PC.
98			SE021PC030	BATTERY COVER LOCKER	1	PC.
99			SE00000193	SCREW 3X10	2	PC.
100			SE01620771	SPEAKER	1	PC.
101			SE01620771	SPEAKER	1	PC.

Item No.	Type	Sub	Part No.	Description	Qty	Unit
<b><u>ACCESSORIES</u></b>						
A01			SE00000077	AC ADAPTER 3A83PCF01B11	1	PC.

\*  
 USABLE MAKITA BATTERIES  
 Li-ion 10.8V-18V (BL1013,BL1014,BL1415,BL1430, BL1815, BL1830, BL7010)  
 Ni-MH 9.6V-18V (1234,1235,1434,1435,1834,1835, 9134, 9135, BH1220C, BH1223C, BH9020, BH9033)  
 Ni-Cad 9.6V-18V (1202,1220,1222,1420,1422,1822, 9100, 9120, 9122, PA09, PA12, PA14, PA18)

\*\*  
 RELATED CHARGERS  
 DC7112, DC7020, DC07SA, DC10WB, DC1414, DC18RA, DC18SD, DC18SE  
 DC1822, DC1804, DC1850, DC24SC

**SERVICE CHANGES**

**1. Changes on Electrical parts**

(TI# Y06465 )

\*\*\* Implementation : From Serial No. 00253704E

Item No	Description	Type 1	Type 2
1	CIRCUIT BOARD A ASSY	SE00000145	SE00000266
INC.	CIRCUIT BOARD A	SE00000146	SE00000267
INC.	CIRCUIT BOARD A JACK	SE00000142	SE00000268
INC.	CIRCUIT BOARD A SPEAKER WIRE	SE00000143	SE00000269
INC.	VOLTAGE DETECT SWITCH ASSY	SE00000144	SE00000270
INC.	CIRCUIT BOARD C (Added)	-	SE00000220
3	CIRCUIT BOARD C ASSY	SE00000156	SE00000299

Above parts are completely interchangeable as a set.