



12V - 3/8" DRIVER DRILL KIT

14.4V - 3/8" DRIVER DRILL KIT

12V - 1/2" DRIVER DRILL KIT

14.4V - 1/2" DRIVER DRILL KIT

18V - 1/2" DRIVER DRILL KIT

 
 
Model 6217DWDE (MCA)

 
Model 6237DWDE (MCA)

Model 6317DWDE (MCA)

Model 6337DWDE (MCA)

Model 6347DWDE (MCA)

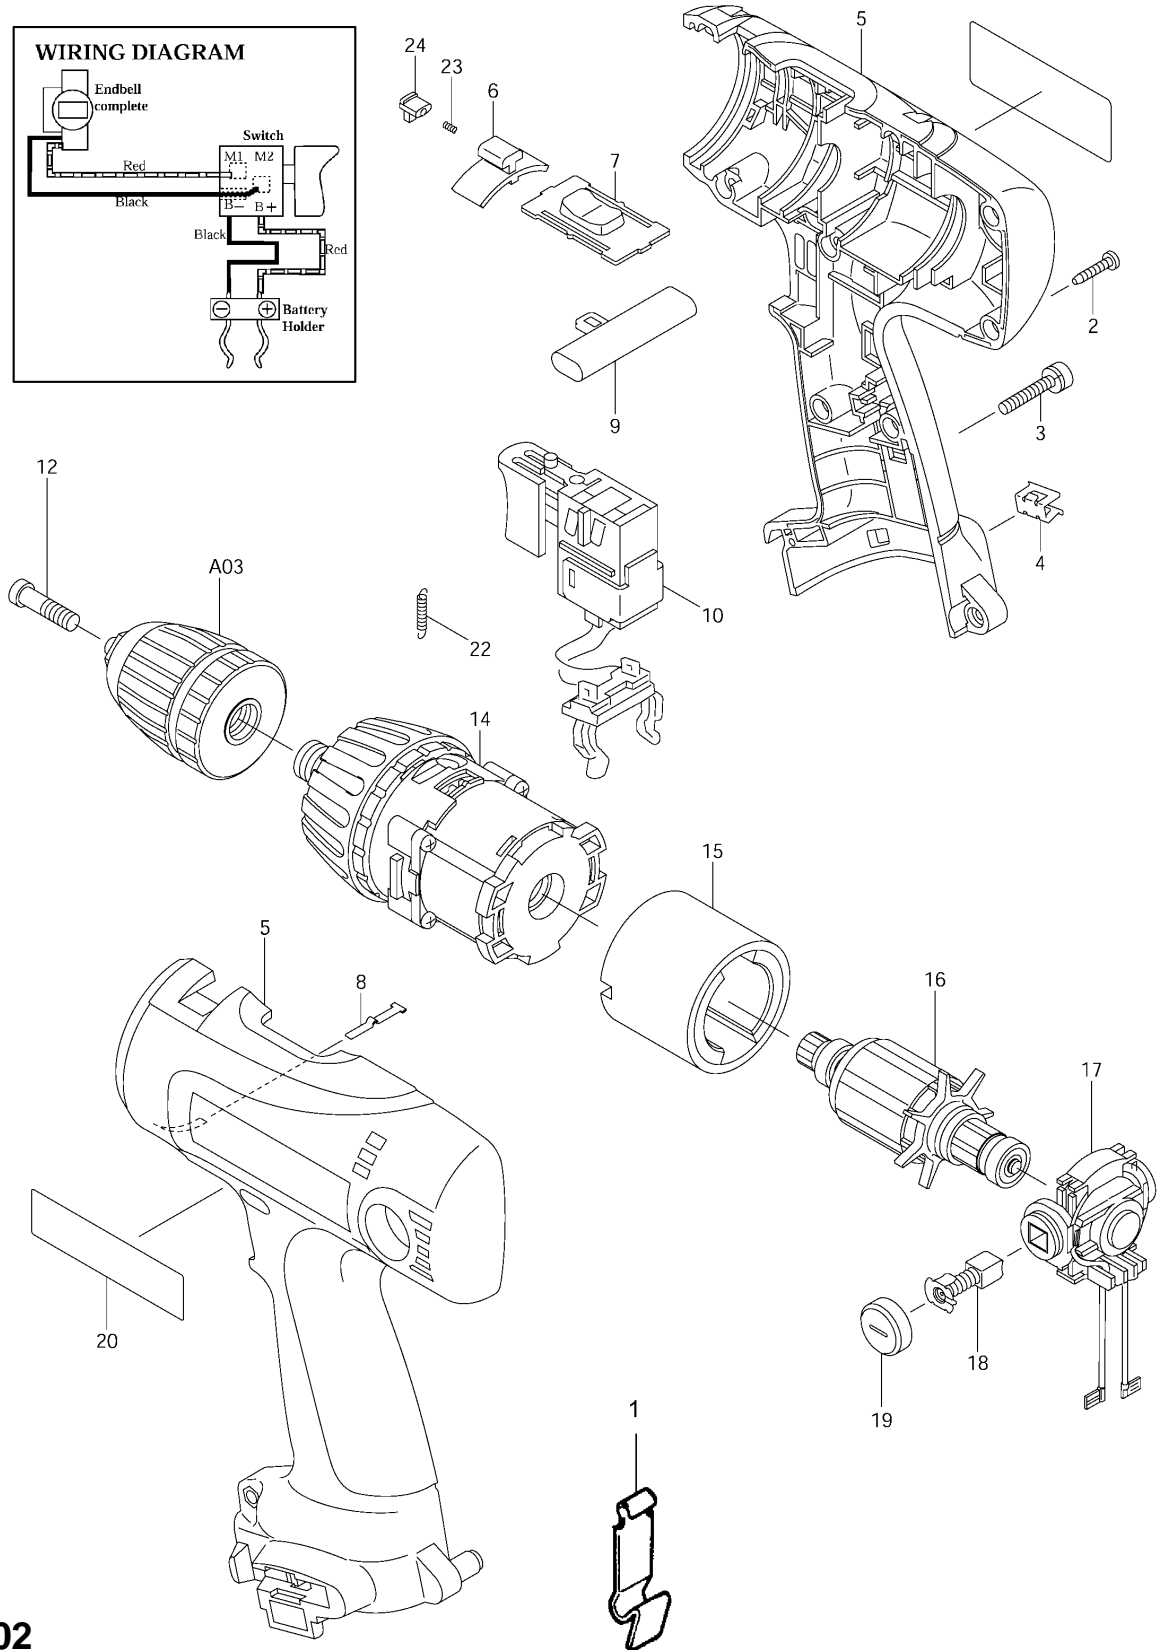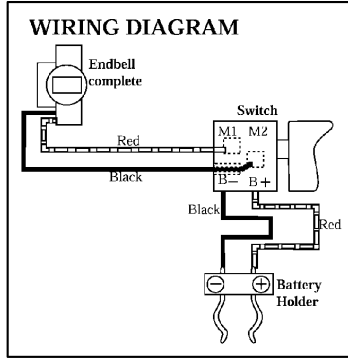

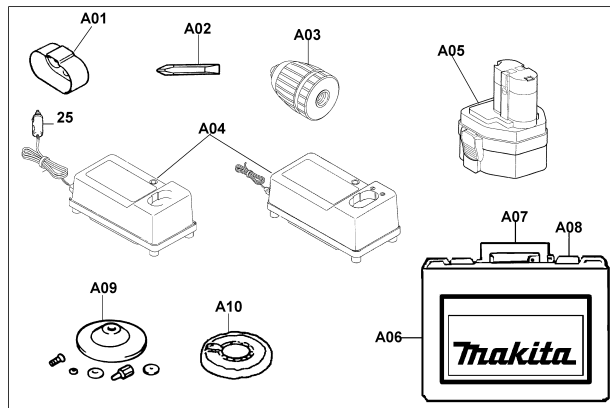

Item No.	Part No.	No. Used	Description	Item No.	Part No.	No. Used	Description
1	343579-1	1	Set Plate (For Batteries with no Hook Button) (Option)	18	191971-3	2	Carbon Brush CB-430 (2pcs/Set)
2	266130-9	9	Tapping Screw Bind PT 3X16 (6217DWDE, 6317DWDE)	19	643929-3	2	Brush Holder Cap (6217DWDE, 6317DWDE, 6237DWDE,6337DWDE)
	266130-9	10	Tapping Screw Bind PT 3X16 (6237DWDE, 6337DWDE, 6347DWDE)		643954-4	2	Brush Holder Cap (6347DWDE)
3	911143-2	1	P.H. Screw M4X22 (6217DWDE, 6317DWDE)	20	819064-1	1	Makita Mark
4	344391-2	2	Bit Holder	22	231829-5	1	Tension Spring 2
5	183440-8	1	Housing Set (Includes Items 20) (6217DWDE, 6317DWDE)	23	233353-4	1	Compression Spring 2
	183451-3	1	Housing Set (Includes Item 20) (6347DWDE)	24	417966-1	1	Lock Lever
	183452-1	1	Housing Set (Includes Item 20) (6237DWDE, 6337DWDE)	25	655000-B	1	Plug
6	417879-6	1	Mode Change Lever	Accessories			
7	125102-2	1	Speed Change Lever Assy (Includes 2x231433-0 - Compression Spring 4)	A01	414938-7	1	Battery Cover
8	232182-2	1	Leaf Spring	A02	-----	1	Bit (See Catalogue for Details)
9	417880-1	1	F/R Change Lever	A03	763158-3	1	1/2" Keyless Drill Chuck - Bulk (6317DWDE, 6337DWDE, 6347DWDE)
10	638143-4	1	Switch Unit (Includes 643924-3 - Battery Holder & 650528-4 - Switch C3SA-MH Single W/O Lock Variable) (6347DWDE)		763163-0	1	3/8" Keyless Drill Chuck - Bulk (6217DWDE, 6237DWDE)
	638144-2	1	Switch Unit (Includes 643924-3 - Battery Holder & 650521-8 - Switch C3SA-ML Single W/O Lock Variable) (6217DWDE, 6237DWDE, 6317DWDE, 6337DWDE)	A04	DC1413	1	Charger for 7.2V ~ 14.4V 1.3~3.0Ah Batteries (6217DWDE, 6317DWDE, 6237DWDE, 6337DWDE)
12	251464-3	1	(-) Flat Head Screw M6X22		DC1422	1	12V Charger for7.2V ~ 14.4V 1.3~3.0Ah Batteries (6217DWDE, 6317DWDE, 6237DWDE, 6337DWDE)
14	125160-8	1	Gear Assy		DC1803	1	DC1803 Battery Charger (6347DWDE)
15	638138-7	1	Yoke Unit		DC1822	1	12V Charger for 7.2V ~ 18V 1.3Ah ~ 3.0Ah Batteries
16	619079-6	1	Armature (6217DWDE, 6317DWDE)	A05	193157-5	1	12V Ni-MH Battery 1234 (2.6Ah) (6217DWDE, 6317DWDE)
	619080-1	1	Armature (6237DWDE, 6337DWDE)		193158-3	1	14.4V Ni-MH Battery 1434 (2.6Ah) (6237DWDE, 6337DWDE)
	619082-7	1	Armature (6347DWDE)		193159-1	1	18V Ni-MH Battery 1834 (2.6Ah) (6347DWDE)
17	638139-5	1	Endbell Com.	A06	824660-2	1	Plastic Carrying Case (Includes 324207-7 - Shaft, A07 & A08)
				A07	417723-7	1	Handle
				A08	417724-5	2	Latch
				A09	123001-2	1	Rubber Pad Assy
				A10	794173-6	1	Wool Bonnet 100

2 Model 6217DWDE
 2 Model 6237DWDE
 2 Model 6317DWDE
 2 Model 6337DWDE
 2 Model 6347DWDE