



Item No.	Type	Sub	Part No.	Description	Qty	Unit
001			TE00000421	DIGITAL DISPLAY	1	PC.
002			TE00000204	SCREW 3X14	10	PC.
003	1		TE00000420	HOUSING ASSEMBLY	1	SET
		INC.		Item No. 21		
	2		TE00000444	HOUSING ASSEMBLY	1	SET
		INC.		Item No. 21		
004			TE00000338	MAT	2	PC.
005			TE00000422	FIXED BRACKET	1	PC.
006			TE00000352	CLAMP	1	PC.
007			TE00000425	MOTOR ASSEMBLY	1	PC.
008			TE00000339	RUBBER(CYLINDER)	2	PC.
009			TE00000329	SWITCH	1	PC.
010			TE00000327	SCREW 3*10	1	PC.
011			TE00000328	TRIGGER SPRING-FIXED BLOCK	1	PC.
012			TE00000330	SPRING	1	PC.
013			TE00000331	SWITCH TRIGGER	1	PC.
014			TE00000327	SCREW 3*10	2	PC.
015			TE00000341	POWER ON/OFF	1	PC.
016			TE00000342	LED PCB	1	PC.
017			TE00000343	TERMINAL PROTECTOR	1	PC.
018			TE00000424	BATTERY TERMINAL	1	PC.
019			TE00000423	PCB	1	PC.
021			TE00000426	SWITCH LABEL	1	PC.
022			TE00000345	AIR PIPE ASSEMBLY	1	PC.
		INC.		Item No. 23		
023			TE00000346	BRITISH ADAPTER	1	PC.
<u>ACCESSORIES</u>			- Visit www.makita.ca for more accessories information -			
A01			TE00000333	SWIM RING ADAPTER	1	PC.
A02			TE00000335	BALL ADAPTER	1	PC.
A03			TE00000334	FRENCH ADAPTER	1	PC.