



PARTS LIST

Item No	Type	Part No	Description	Qty	Unit
001		231952-6	RING SPRING 12	1	PC.
002		253575-0	FLAT WASHER 13	1	PC.
003		232592-3	COMPRESSION SPRING 14	1	PC.
004		327B23-8	BIT SLEEVE	1	PC.
005		232800-2	LEAF SPRING	1	PC.
006		216040-0	STEEL BALL 3.5	2	PC.
007		253575-0	FLAT WASHER 13	1	PC.
008		8155E0-0	DTD158 NAME PLATE	1	PC.
009		1832C7-5	HOUSING SET	1	SET
009	INC.	263032-0	RUBBER PIN 4	6	PC.
009	INC.		Item No. 36		
009	INC.	252126-6	HEX. LOCK NUT M4-7	2	PC.
009	INC.	263005-3	RUBBER PIN 6	2	PC.
009	INC.	8099E6-2	CAUTION LABEL	1	PC.
010		266429-2	BINDING HEAD TAPPING SCREW 3X16	9	PC.
011		422A03-4	BUMPER	1	PC.
012		1412U1-9	HAMMER CASE COMPLETE	1	PC.
013		261168-9	NYLON WASHER 29	1	PC.
014		327G34-3	ANVIL M	1	PC.
015		327B60-2	HAMMER	1	PC.
016		216040-0	STEEL BALL 3.5	24	PC.
017		267175-0	FLAT WASHER 24	1	PC.
018		234251-5	COMPRESSION SPRING 25	1	PC.
019		216041-8	STEEL BALL 5.6	2	PC.
020		327G36-9	SPINDLE	1	PC.
021		256253-1	PIN 5	2	PC.
022		253853-8	FLAT WASHER 15	1	PC.
023		227362-3	SPUR GEAR 22	2	PC.
024		227A92-2	INTERNAL GEAR 51	1	PC.
025		213507-9	O-RING 40	1	PC.
026		213606-7	O-RING 48	1	PC.
027		4134N6-5	BEARING BOX	1	PC.
028		266490-9	PAN HEAD TAPPING SCREW 2X6	3	PC.
029		4134N7-3	F/R CHANGE LEVER	1	PC.
030		620T58-9	CONTROL MODULE	1	PC.
031		629224-5	STATOR	1	PC.
032		652069-6	FLAT HEAD SCREW M3X6	3	PC.
033		619933-4	ROTOR	1	PC.

Item No	Type	Part No	Description	Qty	Unit
034		654938-7	TERMINAL	1	PC.
035		8155E1-8	DTD158 SERIAL NO. LABEL	1	PC.
037		422B40-4	FELT	1	PC.
A01		266622-8	TRUSS HEAD SCREW M4X12	1	PC.
A02		346449-3	HOOK	1	PC.
A03		-----	18V LI-ION BATTERY		
A04		-----	BATTERY CHARGER		
F04		194633-2	STOPPER SET	1	PC.
F05		194649-7	BATTERY PROTECTOR SET	1	PC.