



## PARTS LIST

Item No	Type	Part No	Description	Qty	Unit
001		PR00000319	HARNES LR SET	1	PC.
002		PR00000251	SINGLE NOZZLE ASSY	1	PC.
002	INC.		Item No. 3-5		
003		PR00000252	CAP NUT	1	PC.
004		PR00000253	SPRAYER NOZZLE	1	PC.
005		PR00000254	O-RING 12X2	1	PC.
006		PR00000255	TWIN HEAD MIST NOZZLE ASSY	1	PC.
006	INC.		Item No. 7-9		
007		PR00000256	CAP NUT	2	PC.
008	2	PR00000258	DISK	2	PC.
009	2	PR00000257	SPRAY CORE	2	PC.
010		PR00000260	SPRAY WAND ASSY	1	PC.
010	INC.		Item No. 11,12		
011		PR00000259	GASKET 11.5	1	PC.
012		PR00000186	O RING 6X2	1	PC.
013		PR00000314	HOOK FOR SPRAY WAND	1	PC.
014		PR00000263	RUBBER CAP	1	PC.
015		PR00000264	SPRAY WAND THREAD ADAPTOR	1	PC.
016		PR00000147	FILTER ASSEMBLY	1	PC.
016	INC.		Item No. 17		
017		PR00000146	O SEAL RING 4.5X1.5	1	PC.
018	2	PR00000501 *	HOSE WITH SWITCH ASSY	1	PC.
018	2	INC. *	Item No. 19-22,25,26		
019		PR00000152	LOCK COVER	1	PC.
020		PR00000254	O-RING 12X2	1	PC.
021		PR00000150	SPRING	1	PC.
022		PR00000151	VALVE ROD	1	PC.
022	INC.		Item No. 23,24		
023		PR00000205	O RING 3X1.5	1	PC.
024		PR00000205	O RING 3X1.5	1	PC.
025		PR00000186	O RING 6X2	1	PC.
026		PR00000149	O RING 8X1.8	1	PC.
027		PR00000182	TAPPING SCREW ST2.9X12	1	PC.
028	2	PR00000502 *	HANDLE SET	1	SE
029		PR00000148	HANDLE TRIGGER ASSEMBLY	1	PC.
030		PR00000182	TAPPING SCREW ST2.9X12	5	PC.
031	2	PR00000485 *	TANK LID (W/SEAL RING)	1	PC.
033		PR00000313	TANK FILTER	1	PC.

Item No	Type	Part No	Description	Qty	Unit
034	2	PR00000512	15L TANK	1	PC.
034	2	INC.	Item No. 35		
035		PR00000373	15L MODEL LABEL	1	PC.
036		PR00000312	DRAIN PLUG ASSY	1	PC.
036		INC.	Item No. 37		
037		PR00000479	O-RING 21.2X2.65	1	PC.
038		PR00000259	GASKET 11.5	1	PC.
039		PR00000265	TANK ELBOW JOINT	1	PC.
040		PR00000280	TUBE 8X230	1	PC.
041		PR00000279	SUCTION HEAD	1	PC.
042		PR00000278	NET FILTER FOR SUCTION HEAD	1	PC.
043		PR00000277	O-RING 17.5X3	1	PC.
044		PR00000262	PLASTIC NUT 1/2"	1	PC.
045		PR00000261	HOSE CLIP	1	PC.
046		PR00000287	SUCTION TUBE SET	1	PC.
046		INC.	Item No. 47-53,63-65,78,80		
047		PR00000281	TUBE 6X140	1	PC.
048		PR00000282	SPRING 5X127	1	PC.
049		PR00000261	HOSE CLIP	1	PC.
050		PR00000283	CHECK VALVE ASSEMBLY	1	PC.
051		PR00000261	HOSE CLIP	1	PC.
052		PR00000284	TUBE 6X55	1	PC.
053		PR00000184	SNAPPER HOSE CLAMP (L)	1	PC.
054	2	PR00000573	PUMP UNIT WITH MOTOR	1	PC.
054	2	INC.	Item No. 55		
055		PR00000268	ANTI VIBRATION RING	1	PC.
056		PR00000292	ANTI VIBRATION PAD	2	PC.
057		PR00000272	MOTOR FIXED PLATE	1	PC.
058		PR00000271	TAPPING SCREW ST4.0X16	2	PC.
059		PR00000274	RUBBER SHEET	1	PC.
060		PR00000273	PUMP FIXED PLATE	1	PC.
061		PR00000271	TAPPING SCREW ST4.0X16	2	PC.
062		PR00000267	SNAPPER HOSE CLAMP (M)	1	PC.
063		PR00000275	TUBE 6X90	1	PC.
064		PR00000276	SPRING	1	PC.
065		PR00000267	SNAPPER HOSE CLAMP (M)	1	PC.
066		PR00000155	GROMMET	1	PC.
067		PR00000184	SNAPPER HOSE CLAMP (L)	1	PC.
068		PR00000267	SNAPPER HOSE CLAMP (M)	1	PC.

Item No	Type	Part No	Description	Qty	Unit
069		PR00000372	NAME PLATE DUS158 CA	1	PC.
070		PR00000350	WARNING LABEL US CA MX	1	PC.
071	1	PR00000468	PUMP HOUSING ASSY US	1	PC.
071	1	INC.	Item No. 70,72		
072		PR00000290	SEALING STRIP	1	PC.
073		PR00000288	PAN HEAD SCREW M5X12 WITH WR	2	PC.
074		PR00000288	PAN HEAD SCREW M5X12 WITH WR	2	PC.
075		PR00000271	TAPPING SCREW ST4.0X16	1	PC.
076		PR00000289	BACK PAD	1	PC.
077		PR00000288	PAN HEAD SCREW M5X12 WITH WR	4	PC.
078		PR00000285	BASE	1	PC.
079		PR00000271	TAPPING SCREW ST4.0X16	2	PC.
080		PR00000286	KNOB LOCK CAP ASSEMBLY	1	PC.
080		INC.	Item No. 81,82		
081		PR00000186	O RING 6X2	1	PC.
082		PR00000475	KNOB LOCK CAP STRAP	1	PC.
083		PR00000295	PCB	1	PC.
084		PR00000293	TAPPING SCREW ST2.9X10	2	PC.
085		PR00000271	TAPPING SCREW ST4.0X16	4	PC.
086		PR00000297	BATTERY HOUSING SET	1	SE
087		PR00000302	BATTERY TERMINAL	1	PC.
088		PR00000130	DAM-BOARD	1	PC.
089		PR00000194	SPRING	2	PC.
090		PR00000132	TAPPING SCREW ST4.0X12	2	PC.
091		PR00000288	PAN HEAD SCREW M5X12 WITH WR	1	PC.
092		PR00000288	PAN HEAD SCREW M5X12 WITH WR	1	PC.
093		PR00000288	PAN HEAD SCREW M5X12 WITH WR	1	PC.
094		PR00000288	PAN HEAD SCREW M5X12 WITH WR	1	PC.
095		PR00000307	INDICATION LABEL	1	PC.
096	1	PR00000299	SWITCH	1	PC.
096	2	PR00000575	SWITCH	1	PC.
097		PR00000298	SWITCH GASKET	1	PC.
098		PR00000300	HEX NUT(SWITCH)	1	PC.
099		PR00000304	BATTERY COVER CLIP	1	PC.
100		PR00000305	BATTERY COVER	1	PC.
101		PR00000306	SHAFT 3X136	1	PC.
102		PR00000303	BATTERY COVER SEAL PAD	1	PC.
A01		PR00000317	MEASURING CUP (ML)	1	PC.
A02		-----	18V LI-ION BATTERY		

Item No	Type	Part No	Description	Qty	Unit
A03		-----	BATTERY CHARGER		
A04		450128-8	BATTERY COVER F/ LXT LI-ION		
F01		AB45127080	WEEDING NOZZLE W/COVER	1	PC.
F02		PR00000251	SINGLE NOZZLE ASSY	1	PC.
F03		PR00000255	TWIN HEAD MIST NOZZLE ASSY	1	PC.
F04		PR00000319	HARNES LR SET	1	PC.

# SERVICE CHANGES: DUS158

## 1. Changes on Tank Lid (T/I#Y09052)

Item No.	Description	Type 1	Type 2
31	TANK LID	PR00000316	-----
	TANK LID (W/ SEAL RING)	-----	PR00000485
32	TANK LID SEALING LID	PR00000315	-----


Above parts are completely interchangeable as a set.

## 2. Changes on Handle Set and Switch Assy (T/I#Y09372)

Item No.	Description	Type 1	Type 2
18	HOSE WITH SWITCH ASSY	PR00000266	PR00000501
28	HANDLE SET	PR00000153	PR00000502

Above parts are completely interchangeable as a set.

Seal ring for water proofing has been added to Switch.

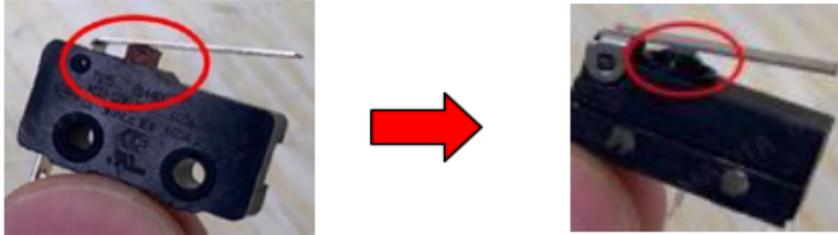

: The shape of Handle has been changed to prevent interference with Seal ring.

