


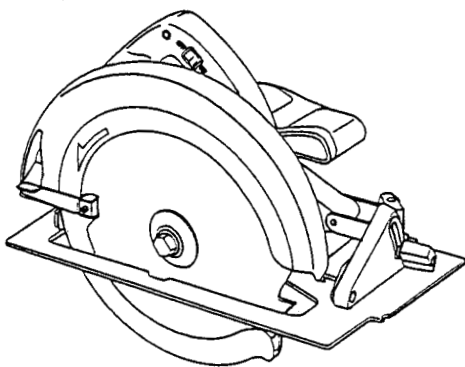


Circular Saw

185 mm (7-1/4")
MODEL 5007F

185 mm (7-1/4")
MODEL 5007FA
Equipped with Electric Blade Brake



 DOUBLE
INSULATION

I N S T R U C T I O N M A N U A L

WARNING: For your personal safety, READ and UNDERSTAND before using.
SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.

www.makita.com

RECEIVED

4/11/01

SPECIFICATIONS

Blade diameter	Max. cutting depth		No load speed (RPM)	Overall length	Net Weight
	90°	45°			
185 mm (7-1/4")	60 mm (2-3/8")	46 mm (1-3/4")	5,800/min.	305 mm (12")	4.8 kg (10.6 lbs)

- Manufacturer reserves the right to change specifications without notice.
- Note: Specifications may differ from country to country.

GENERAL SAFETY RULES (For All Tools)

USA002-2

WARNING! Read and understand all instructions. Failure to follow all instructions listed below, may result in electric shock, fire and/or serious personal injury.

SAVE THESE INSTRUCTIONS.

Work Area

1. Keep your work area clean and well lit. Cluttered benches and dark areas invite accidents.
2. Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases, or dust. Power tools create sparks which may ignite the dust or fumes.
3. Keep bystanders, children, and visitors away while operating a power tool. Distractions can cause you to lose control.

Electrical Safety

4. Double insulated tools are equipped with a polarized plug (one blade is wider than the other.) This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install a polarized outlet. Do not change the plug in any way. Double insulation eliminates the need for the three wire grounded power cord and grounded power supply system.
5. Avoid body contact with grounded surfaces such as pipes, radiators, ranges and refrigerators. There is an increased risk of electric shock if your body is grounded.

6. Do not expose power tools to rain or wet conditions. Water entering a power tool will increase the risk of electric shock.

7. Do not abuse the cord. Never use the cord to carry the tools or pull the plug from an outlet. Keep cord away from heat, oil, sharp edges or moving parts. Replace damaged cords immediately. Damaged cords increase the risk of electric shock.

8. When operating a power tool outside, use an outdoor extension cord marked "W-A" or "W". These cords are rated for outdoor use and reduce the risk of electric shock.

Personal Safety

9. Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use tool while tired or under the influence of drugs, alcohol, or medication. A moment of inattention while operating power tools may result in serious personal injury.

10. Dress properly. Do not wear loose clothing or jewelry. Contain long hair. Keep your hair, clothing, and gloves away from moving parts. Loose clothes, jewelry, or long hair can be caught in moving parts.

11. Avoid accidental starting. Be sure switch is off before plugging in. Carrying tools with your finger on the switch or plugging in tools that have the switch on invites accidents.

12. Remove adjusting keys or wrenches before turning the tool on. A wrench or a key that is left attached to a rotating part of the tool may result in personal injury.

13. Do not overreach. Keep proper footing and balance at all times. Proper footing and balance enables better control of the tool in unexpected situations.

14. Use safety equipment. Always wear eye protection. Dust mask, non-skid safety shoes, hard hat, or hearing protection must be used for appropriate conditions. Ordinary eye or sun glasses are NOT eye protection.

Tool Use and Care

15. Use clamps or other practical way to secure and support the workpiece to a stable platform. Holding the work by hand or against your body is unstable and may lead to loss of control.

16. Do not force tool. Use the correct tool for your application. The correct tool will do the job better and safer at the rate for which it is designed.

17. Do not use tool if switch does not turn it on or off. Any tool that cannot be controlled with the switch is dangerous and must be repaired.

18. Disconnect the plug from the power source before making any adjustments, changing accessories, or storing the tool. Such preventive safety measures reduce the risk of starting the tool accidentally.

19. Store idle tools out of reach of children and other untrained persons. Tools are dangerous in the hands of untrained users.

20. Maintain tools with care. Keep cutting tools sharp and clean. Properly maintained tools with sharp cutting edges are less likely to bind and are easier to control.

21. Check for misalignment or binding of moving parts, breakage of parts, and any other condition that may affect the tools operation. If damaged, have the tool serviced before using. Many accidents are caused by poorly maintained tools.

22. Use only accessories that are recommended by the manufacturer for your model. Accessories that may be suitable for one tool, may become hazardous when used on another tool.

24. When servicing a tool, use only identical replacement parts. Follow instructions in the Maintenance section of this manual. Use of unauthorized parts or failure to follow Maintenance instructions may create a risk of electric shock or injury.

SERVICE

23. Tool service must be performed only by qualified repair personnel. Service or maintenance performed by unqualified personnel could result in a risk of injury.

EXTENSION CORDS.

Make sure your extension cord is in good condition. When using an extension cord, be sure to use one heavy enough to carry the current your product will draw. An undersized cord will cause a drop in line voltage resulting in loss of power and overheating. Table 1 shows the correct size to use depending on cord length and nameplate ampere rating. If in doubt, use the next heavier gage. The smaller the gage number, the heavier the cord.

Table 1. Minimum gage for cord

Ampere Rating		Volts	Total length of cord in feet			
		120 V	25 ft.	50 ft.	100 ft.	150 ft.
More than	Not more than	AWG				
0	6		18	16	16	14
6	10		18	16	14	12
10	12		16	16	14	12
12	16		14	12	Not Recommended	

SPECIFIC SAFETY RULES

USB008-2

DO NOT let comfort or familiarity with product (gained from repeated use) replace strict adherence to circular saw safety rules. If you use this tool unsafely or incorrectly, you can suffer serious personal injury.

1. **DANGER!** Keep hands away from cutting area and blade. Keep your second hand on auxiliary handle, or motorhousing.

If both hands are holding the saw, they cannot be cut by the blade.

Keep your body positioned to either side of the saw blade, but not in line with the saw blade. KICKBACK could cause the saw to jump backwards. (See "Causes and Operator Prevention of Kickback")

Do not reach underneath the work. The guard can not protect you from the blade below the work. Don't attempt to remove cut material when blade is moving.

CAUTION:

Blades coast after turn off. Wait until blade stops before grasping cut material.

2. Check lower guard for proper closing before each use. Do not operate saw if lower guard does not move freely and close instantly. Never clamp or tie the lower guard into the open position.

If saw is accidentally dropped, lower guard may be bent. Raise the lower guard with the Retracting handle (lever) and make sure it moves freely and does not touch the blade or any other part, in all angles and depths of cut. To check lower guard, open lower guard by hand, then release and watch guard closure. Also check to see that retracting handle (lever) does not touch tool housing. Leaving blade exposed is VERY DANGEROUS and can lead to serious personal injury.

3. Check the operation and condition of the lower guard spring. If the guard and the spring are not operating properly, they must be serviced before use.

Lower guard may operate sluggishly due to dam-

aged parts, gummy deposits, or a buildup of debris.

4. Lower guard should be retracted manually only for special cuts such as "Pocket Cuts" and "Compound Cuts." Raise lower guard by Retracting Handle (lever). As soon as blade enters the material, lower guard must be released.

For all other sawing, the lower guard should operate automatically.

5. Always observe that the lower guard is covering the blade before placing saw down on bench or floor.

An unprotected, coasting blade will cause the saw to walk backwards, cutting whatever is in its path. Be aware of the time it takes for the blade to stop after switch is released.

6. NEVER hold piece being cut in your hands or across your leg.

It is important to support the work properly to minimize body exposure, blade binding, or loss of control.

7. Hold tool by insulated gripping surfaces when performing an operation where the cutting tool may contact hidden wiring or its own cord.

Contact with a "live" wire will also make exposed metal parts of the tool "live" and shock the operator.

8. When ripping always use a rip fence or straight edge guide.

This improves the accuracy of cut and reduces the chance for blade binding.

9. Always use blades with correct size and shape (diamond vs. round) arbor holes.

Blades that do not match the mounting hardware of the saw will run eccentrically, causing loss of control.

10. Never use damaged or incorrect blade washers or bolts.

The blade washers and bolt were specially designed for your saw, for optimum performance and safety of operation.

11. Causes and Operator Prevention of Kickback:

Kickback is a sudden reaction to a pinched, bound or misaligned saw blade, causing an uncontrolled saw to lift up and out of the workpiece toward the operator. When the blade is pinched or bound tightly by the kerf closing down, the blade stalls and the motor reaction drives the unit rapidly back toward the operator. If the blade becomes twisted or misaligned in the cut, the teeth at the back edge of the blade can dig into the top surface of the wood causing the blade to climb out of the kerf and jump back toward operator. Kickback is the result of tool misuse and/ or incorrect operating procedures or conditions and can be avoided by taking proper precautions as given below:

12. Maintain a firm grip with both hands on the saw and position your body and arm to allow you to resist KICKBACK forces. KICKBACK forces can be controlled by the operator, if proper precautions are taken.

13. When blade is binding, or when interrupting a cut for any reason, release the trigger and hold the saw motionless in the material until the blade comes to a complete stop. Never attempt to remove the saw from the work or pull the saw backward while the blade is in motion or KICKBACK may occur. Investigate and take corrective actions to eliminate the cause of blade binding.

14. When restarting a saw in the workpiece, center the saw blade in the kerf and check that saw teeth are not engaged into the material. If saw blade is binding, it may walk up or KICKBACK from the workpiece as the saw is restarted.

15. Support large panels to minimize the risk of blade pinching and KICKBACK. Large panels tend to sag under their own weight. Supports must be placed under the panel on both sides, near the line of cut and near the edge of the panel as shown in Fig. 1.

To minimize the risk of blade pinching and kickback. When cutting operation requires the resting of the saw on the workpiece, the saw shall be rested on the larger portion and the smaller piece cut off.

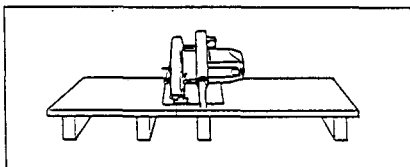


Fig. 1 To avoid kickback, do support board or panel near the cut.

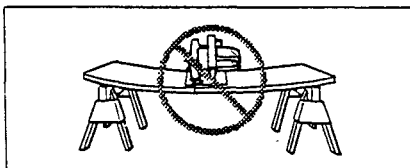


Fig. 2 Do not support board or panel away from the cut.

16. Do not use dull or damaged blade.

Unsharpened or improperly set blades produce narrow kerf causing excessive friction, blade binding and KICKBACK. Keep blade sharp and clean. Gum and wood pitch hardened on blades slows saw and increases potential for kickback.

Keep blade clean by first removing it from tool, then cleaning it with gum and pitch remover, hot water or kerosene. Never use gasoline.

17. Blade depth and bevel adjusting locking levers must be tight and secure before making cut.

If blade adjustment shifts while cutting, it may cause binding and KICKBACK.

18. Use extra caution when making a "Pocket Cut" into existing walls or other blind areas. The protruding blade may cut objects that can cause KICKBACK. For pocket cuts, retract lower guard using retracting handle (lever).

19. ALWAYS hold the tool firmly with both hands. NEVER place your hand or fingers behind the saw. If kickback occurs, the saw could easily jump backwards over your hand, possibly causing severe injury.

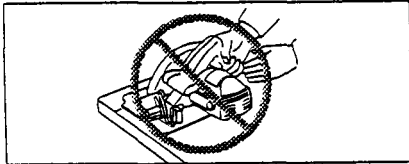


Fig. 3

20. Never force the saw. Forcing the saw can cause uneven cuts, loss of accuracy, and possible kickbacks.

Push the saw forward at a speed so that the blade cuts without slowing.

21. Use extra caution when cutting damp wood, pressure treated lumber, or wood containing knots.

Adjust speed of cut to maintain smooth advancement of tool without decrease in blade speed.

22. Adjustments. Before cutting be sure depth and bevel adjustments are tight.

23. Avoid Cutting Nails. Inspect for and remove all nails from lumber before cutting.

24. When operating the saw, keep the cord away from the cutting area and position it so that it will not be caught on the workpiece during the

cutting operation. Operate with proper hand support, proper workpiece support, and supply cord routing away from the work area.

The tool is provided with front grip and rear handle for two hands operation. Keep both hands on tool using supplied handles. If both hands are holding saw, they can not be cut by blade. **WARNING.** It is important to support the workpiece properly and to hold the saw firmly to prevent loss of control which could cause personal injury. Fig. 4 illustrates typical hand support of the saw.

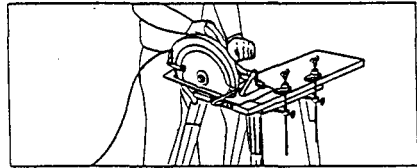


Fig. 4 A typical illustration of proper hand support, workpiece support, and supply cord routing.

25. Place the wider portion of the saw base on that part of the workpiece which is solidly supported, not on the section that will fall off when the cut is made. As examples, Fig.5 illustrates the RIGHT way to cut off the end of a board, and Fig. 6 the WRONG way, If the workpiece is short or small, clamp it down. **DON'T TRY TO HOLD SHORT PLACES BY HAND!**

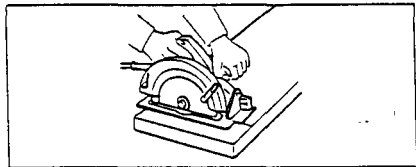


Fig. 5

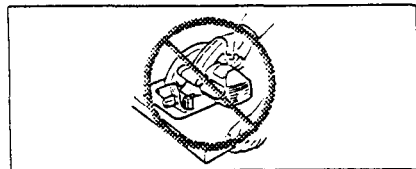


Fig. 6

26. Never attempt to saw with the circular saw held upside down in a vise. This is extremely dangerous and can lead to serious accidents.

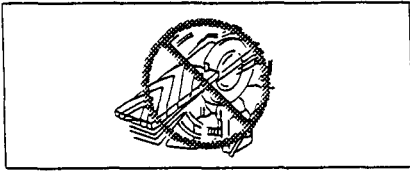


Fig. 7

27. WARNING: Blade coasts to stop after switch is released. Contact with coasting blade can cause serious injury. Before setting the tool down after completing a cut, be sure that the lower (telescoping) guard has closed and the blade has come to a complete stop.

28. Some material contains chemicals which may be toxic. Take caution to prevent working dust inhalation and skin contact. Follow material supplier safety data.

SAVE THESE INSTRUCTIONS.

WARNING:

MISUSE or failure to follow the safety rules stated in this instruction manual may cause serious personal injury.

SYMBOLS

USD291-2

The followings show the symbols used for tool.


V volts

A amperes

 alternating or direct current

n_0 no load speed


 Class II Construction

 revolutions or reciprocation per minute

FUNCTIONAL DESCRIPTION

CAUTION:

- Always be sure that the tool is switched off and unplugged before adjusting or checking function on the tool.

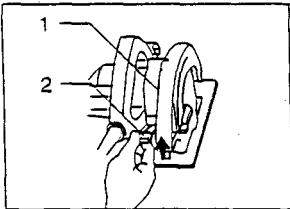

1. Depth guide
2. Lever


Adjusting depth of cut

CAUTION:

- After adjusting the depth of cut, always tighten the lever securely.

Loosen the lever on the depth guide and move the base up or down. At the desired depth of cut, secure the base by tightening the lever.


For cleaner, safer cuts, set cut depth so that no more a blade tooth length projects below workpiece surface. Using proper cut depth helps to reduce potential for dangerous KICKBACKS which can cause personal injury.

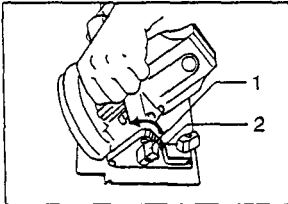

1. Clamping screw
2. Bevel scale plate

Bevel cutting


Loosen the clamping screw on the bevel scale plate on the front of the base. Set for the desired angle (0° – 45°) by tilting accordingly, then tighten the clamping screw firmly.

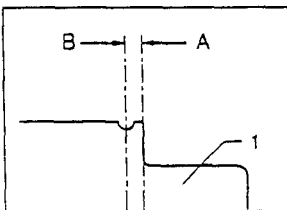

- A. For straight cuts (90°)
 - B. For 45° bevel cut
1. Base

Sighting

For straight cuts, align the A position on the front of the base with your cutting line. For 45° bevel cuts, align the B position with it.

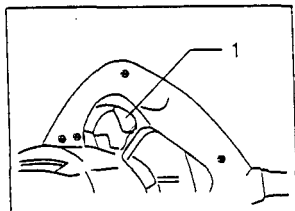


1. Switch trigger

Switch action

CAUTION:

- Before plugging in the tool, always check to see that the switch trigger actuates properly and returns to the "OFF" position when released.

To start the tool, simply pull the trigger. Release the trigger to stop.

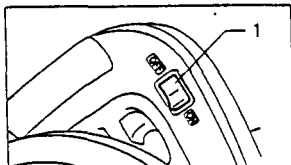

1. Lamp switch


Lighting the lamp

CAUTION:

- Do not see the source of light directly.
- Always be sure that the lamp is switched off when you do not use the tool.

To turn on the lamp, press the "ON" side of the lamp switch. Press the "OFF" side to turn it off.

ASSEMBLY

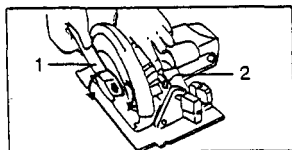


1. Wrench
2. Shaft lock

Removing or installing saw blade

CAUTION:

- Be sure the blade is installed with teeth pointing up at the front of the tool.
- Use only the Makita wrench to install or remove the blade.

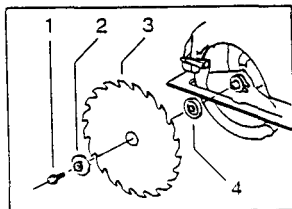


1. Hex bolt
2. Outer flange
3. Saw blade
4. Inner flange

To remove the blade, press the shaft lock so that the blade cannot revolve and use the wrench to loosen the hex bolt counterclockwise. Then remove the hex bolt, outer flange and blade.

To install the blade, follow the removal procedure in reverse. **BE SURE TO TIGHTEN THE HEX BOLT CLOCKWISE SECURELY.** When changing blade, make sure to also clean upper and lower blade guards of accumulated sawdust. Such efforts do not, however, replace the need to check lower guard operation before each use.

OPERATION

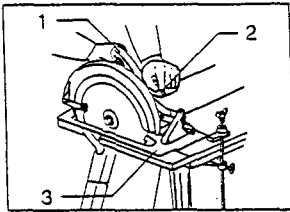


1. Rear handle
2. Front grip
3. Base

CAUTION:

- Be sure to move the tool forward in a straight line gently. Forcing or twisting the tool will result in overheating of the motor and dangerous kickback, possibly causing severe injury.

Hold the tool firmly. The tool is provided with both front grip and rear handle. Use both to best grasp the tool. If both hands are holding saw, they cannot be cut by the blade. Set the base on the workpiece to be cut without the blade making any contact. Then turn the tool on and wait until the blade attains full speed. Now simply move the tool forward over the workpiece surface, keeping it flat and advancing smoothly until the sawing is completed. To get clean cuts, keep your sawing line straight and your speed of advance uniform. If the cut fails to properly follow your intended cut line, do not attempt to turn or force the tool back to the cut line. Doing so may bind the blade and lead to dangerous kickback and possible serious injury. Release switch, wait for blade to stop and then withdraw tool. Realign tool on new cut line, and start cut again. Attempt to avoid positioning which exposes operator to chips and wood dust being ejected from saw. Use eye protection to help avoid injury.

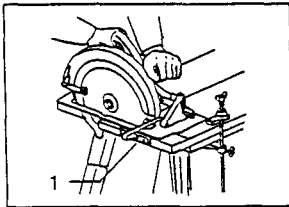

1. Rip fence


Rip fence (Guide rule) - optional accessory

The handy rip fence allows you to do extra-accurate straight cuts. Simply slide the rip fence up snugly against the side of the workpiece and secure it in position with the screw on the front of the base. It also makes repeated cuts of uniform width possible.

MAINTENANCE

CAUTION:


- Always be sure that the tool is switched off and unplugged before attempting to perform inspection or maintenance.

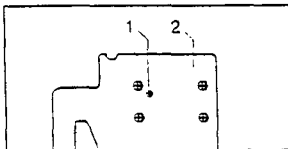


1. (+) Screw
2. Base

Adjusting for accuracy of 90° cut (vertical cut)


This adjustment has been made at the factory. But if it is off, adjust the adjusting screw with a screwdriver while squaring the blade with the base using a triangular rule square, etc.

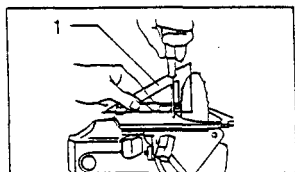

1. Triangular rule

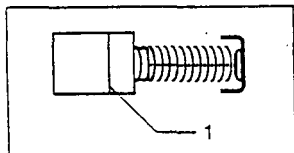

1. Limit mark

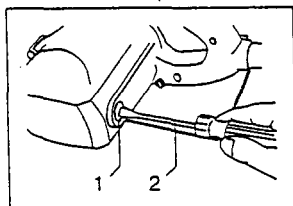

1. Brush holder cap
2. Screwdriver

Replacing carbon brushes

Remove and check the carbon brushes regularly. Replace when they wear down to the limit mark. Keep the carbon brushes clean and free to slip in the holders. Both carbon brushes should be replaced at the same time. Use only identical carbon brushes.

Use a screwdriver to remove the brush holder caps. Take out the worn carbon brushes, insert the new ones and secure the brush holder caps.

To maintain product SAFETY and RELIABILITY, repairs, any other maintenance or adjustment should be performed by Makita Authorized or Factory Service Centers, always using Makita replacement parts.

ACCESSORIES

CAUTION:

- These accessories or attachments are recommended for use with your Makita tool specified in this manual. The use of any other accessories or attachments might present a risk of injury to persons. Only use accessory of attachment for its stated purpose.


If you need any assistance for more details regarding these accessories, ask your local Makita service center.

- Steel & Carbide-tipped saw blades

Combination	General purpose blade for fast and smooth rip, crosscuts and miters.
Pressure treated/ Wet lumber	Designed for fact cutting in pressure treated and wet lumber.
Fine cross cuts	For sand-free cuts cleanly against the grain.

- Rip fence
- Wrench 13

 Cut



First-Class
Postage
Required
Post Office will
not deliver
without proper
postage.

Makita U.S.A., Inc.
14930 Northam Street
La Mirada, CA 90638-5753



Fold

MAIL THIS PORTION

Your answers to the following questions are appreciated.

1. This product was purchased from:

- Home Center Other ()
 Hardware/Lumber Store
 Tool Distributor
 Industrial Supply
 Construction Supply

3. How did you learn about this product:

- Magazine Radio
 From Dealer Exhibition
 Newspaper From Friend
 Store Display Previous Usage
 Catalog Other ()

2. Use of the product is intended for:

- Construction Trade
 Industrial Maintenance
 Home Maintenance
 Hobby
 Other ()

4. Most favored points are:

- Design Repair Service
 Features Durability
 Size Power
 Price Other ()
 Makita Brand

5. Any comments:

DATE PURCHASED			MODEL NO.			
MONTH	DAY	YEAR	SERIAL NO.			
<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>			
INTL. LAST NAME / COMPANY NAME					STATUS	SEX
					Married Single	M F
<input type="text"/>						
STREET ADDRESS						
<input type="text"/>						
CITY						
<input type="text"/>						
STATE	ZIP CODE		PHONE	AREA CODE		
<input type="text"/>	<input type="text"/>		<input type="text"/>	<input type="text"/>		
AGE:	<input type="checkbox"/> Under 19	<input type="checkbox"/> 20-29	<input type="checkbox"/> 30-39	<input type="checkbox"/> 40-49	<input type="checkbox"/> 50-60	<input type="checkbox"/> Over 60

BE SURE TO COMPLETE THE CUSTOMER'S PORTION OF THIS FORM AND RETAIN FOR YOUR RECORDS.

Please return this portion by facsimile or mail.

Facsimile No: (714) 522-8133

FACTORY SERVICE CENTERS

1-800-4-MAKITA

RETAIN THIS PORTION FOR YOUR RECORDS

ALABAMA
2365 Peaham Parkway
Peaham, AL 35124
(205) 420-1731

ARIZONA
3707 E. Broadway Rd., Ste 1
Phoenix, AZ 85040
(602) 437-1950

ARKANSAS
Shadesford Shopping Center
240 South Shadesford Rd., Ste. C
Little Rock, AR 72111
(501) 224-6733

CALIFORNIA
41850 Chertsey St.
Fremont, CA 94538-5107
(510) 457-9881

1421 N. Clows Ave., Ste. 112
Fresno, CA 93727
(559) 232-5166

14830 Norman St.
La Habra, CA 90628-6753
(714) 522-9088

1970 Fulton Avenue
Sacramento, CA 95825
(916) 482-5197

1440 South "E" Street
San Bernardino, CA 92408
(909) 385-1239

7874 Claremont Mesa Blvd
San Diego, CA 92111
(619) 278-4471

1714 E. McFadden Ave., Unit M
Santa Ana, CA 92705
(714) 547-5066

1585 Winchester B
Camarillo, CA 93011
(408) 379-0377

18735 Saseby St., Ste. 105
Van Nuys, CA 91406
(818) 792-2440

COLORADO
11832 E. 51st Ave
Denver, CO 80239-2709
(303) 371-2850

CONNECTICUT
508 Soung St.
Windsor Locks, CT 06096
(860) 292-4406

FLORIDA
620 Douglas Ave. Suite 1302
Altamonte Springs, FL 32714
(407) 77-6000

1301 W. Copens Road
Pompano Beach, FL 33064
(954) 970-4722

Thompson Center Woods
5801 W. Waters Ave., Ste. 406
Tampa, FL 33634
(813) 886-2292

GEORGIA
4600 River Green Parkway HW
Oakum, GA 30096
(770) 476-9911

HAWAII
4610 Salt Lake Blvd., Suite A7
Honolulu, HI 96818
(808) 947-0038

ILLINOIS
1450 Fernside Dr.
Mt. Prospect, IL 60056-6011
(847) 297-3100

INDIANA
4403 Morgan Road, Unit 1
Indianapolis, IN 46268
(317) 334-9980

KANSAS
3618 W. 35th St.
Overland Park, KS 66212
(913) 642-1111

KENTUCKY
1215 S. Hurstbourne Parkway
Louisville, KY 40222
(502) 328-4740

LOUISIANA
5828 Jefferson Hwy.
Metairie, LA 70123
(504) 733-4128

MARYLAND
7541 - 46 Aquia Highway
Glen Burnie, MD 21061
(410) 580-4190

MASSACHUSETTS
222 Providence Hwy
Watertown, MA 02090
(617) 461-3754

MICHIGAN
27464 Ave. Arbor Trail
Livonia, MI 48150
(313) 432-1012

MINNESOTA
6427 Park Ave. South
Rochester, MN 55423
(612) 869-5190

MISSOURI
2878 Watson Road
St. Louis, MO 63126-2221
(314) 908-9999

NEBRASKA
4129 S. 34th St.
Omaha, NE 68127
(402) 597-2925

NEVADA
3278 S. Decatur Blvd
Suite 22 - 24
Las Vegas, NV 89132
(702) 258-4377

NEW JERSEY
251 Herold Blvd
Dayton, NJ 08610-1539
(609) 655-1212

NEW MEXICO
5905 Menaul Blvd. NE
Albuquerque, NM 87110
(505) 881-4612

NEW YORK
4817 Gatesee Street
Chesterbrook, NY 14225
(716) 895-2903

131-35 31th Ave.
Flushing, NY 11354
(718) 886-0971

NORTH CAROLINA
3501-G S. Tryon St.
Charlotte, NC 28217
(704) 527-0611

OHIO
4253 E. Main St.
Columbus, OH 43213
(614) 960-9222

4379 Pearl Road
Parma Heights, OH 44130
(440) 943-7555

1617 E. Kemper Rd.
Sharonville, OH 45248
(513) 771-4789

OKLAHOMA
552 E. Memorial Road
Oklahoma City, OK 73114
(405) 752-2655

OREGON
328 19th Avenue, N.W.
Portland, OR 97209
(503) 222-1823

PENNSYLVANIA
Spangeneer Plaza
384 Wilmington W. Chester Pike
Glen Mills, PA 19342
(610) 458-4122

6200 Sabook Blvd
Pittsburgh, PA 15227
(412) 266-4363

PUERTO RICO
200 Guayama St
Hato Rey, PR 00917
(787) 250-4775

TENNESSEE
465 Johnsonville Rd
Memphis, TN 37211
(615) 331-2922

TEXAS
12801 Stenmons Pkwy Ste. 309
Farmers Branch, TX 75234
(972) 243-1150

12701 Directors Dr.
Sugarland, TX 77477-3701
(281) 545-6685

3463 IH-35 North, Ste. 101
San Antonio, TX 78219
(210) 228-0478

UTAH
145 E. 1300 S., Ste. 101
Salt Lake City, UT 84115
(801) 350-3410

VIRGINIA
5780 Northampton Blvd., Ste. 102
Virginia Beach, VA 23455
(757) 460-0280

WASHINGTON
22220 9th Ave. So., Shop. A
Kent, WA 98032
(252) 395-8055

WISCONSIN
Lindero Plaza Shopping Ctr
2245 S. 108th St. West Allis, WI
53227
(414) 541-4778

CUSTOMER'S RECORD

When you need service: Send complete tool (prepaid) to one of the Makita Factory Service Centers listed, or to an Authorized Makita Service Center. Be sure to attach a letter to the outside of the carton detailing the problem with your tool.	Date Purchased
	Dealer's Name & Address
	Model No.
	Serial No.

WARNING

Some dust created by power sanding, sawing, grinding, drilling, and other construction activities contains chemicals known to the State of California to cause cancer, birth defects or other reproductive harm. Some examples of these chemicals are:

- lead from lead-based paints,
- crystalline silica from bricks and cement and other masonry products, and
- arsenic and chromium from chemically-treated lumber.

Your risk from these exposures varies, depending on how often you do this type of work. To reduce your exposure to these chemicals: work in a well ventilated area, and work with approved safety equipment, such as those dust masks that are specially designed to filter out microscopic particles.

MAKITA LIMITED ONE YEAR WARRANTY

Warranty Policy

Every Makita tool is thoroughly inspected and tested before leaving the factory. It is warranted to be free of defects from workmanship and materials for the period of ONE YEAR from the date of original purchase. Should any trouble develop during this one-year period, return the COMPLETE tool, freight prepaid, to one of Makita's Factory or Authorized Service Centers. If inspection shows the trouble is caused by defective workmanship and material, Makita will repair (or at our option, replace) without charge.

This Warranty does not apply where:

- repairs have been made or attempted by others
- repairs required because of normal wear and tear
- The tool has been abused, misused or improperly maintained
- alterations have been made to the tool

In no event shall Makita be liable for any indirect, incidental or consequential damages from the sale or use of the product. This disclaimer applies both during and after the term of this warranty.

Makita disclaims liability for any implied warranties of "merchantability" and "fitness for a specific purpose," after the one-year term of this warranty.

This Warranty gives you specific legal rights, and you may also have other rights which vary from state to state. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. Some states do not allow limitation on how long an implied warranty lasts, so the above limitation may not apply to you.

Makita Corporation
Anjo, Aichi Japan
Made in China

884404-064