


Item No.	Part No.	No. Used	Description	Item No.	Part No.	No. Used	Description
1	682502-4	1	Cord Guard 8-85 (Type 2)	20	*	1	Ball Bearing 6002DDW
2	183048-8	1	Motor Housing Set (With Rubber Pin 4 - 2X263002-9)(Old 182921-9)	21	253315-6	1	Thin Washer 15
3	664424-0	1	Cord Com. 2P-18-2.0M (Type 1)	22	316835-2	1	Bearing Box
	664013-1	1	Cord With Plug 2P-18-2.5M (Type 2)	23	241896-2	1	Fan 88
4	687063-9	1	Strain Relief	24	210020-8	1	Ball Bearing 6000DDU
5	651523-7	1	Switch (Old 651513-0)	25	961015-1	1	Stop Ring E-9
6	191956-9	2	Carbon Brush CB-75 (2pcs/Set)	26	593381-4	1	Field Assy (Old 593376-7)
7	643552-4	2	Brush Holder 5-8	27	517231-9	1	Armature Assy (Includes Items 24, 25, 28 & 29)
8	416064-8	1	Dust Nozzle	28	313080-0	1	Counter Weight
9	257202-1	1	Ring 25	29	210017-7	1	Ball Bearing 607DDSD
10	*	2/1	Leaf Spring / O Ring 75	33	265995-6	7	Tapping Screw 4x18
11	*	1	Skirt Set	110	654532-5	1	Terminal Block 1P
12	416063-0	1	Dust Bag Nozzle	111	654509-0	1	Connector 2-SD
14	911128-8	3	P.H. Screw M4x16	112	654002-4	2	Solderless Eye Terminal 1.25-M4
16	316834-4	1	Bearing Box Cover	Accessories			
17	416062-2	1	Brake Ring	A01	-----	1	Abrasive Disc (See Catalogue for Details)
18	911116-5	1	P.H. Screw M4x12	A02	166047-5	1	Dust Bag
19	253739-6	1	Flat Washer 4	A03	743081-8	1	Pad 123

* SEE SERVICE CHANGES

SERVICE CHANGES

1. Change on Skirts Set Etc.

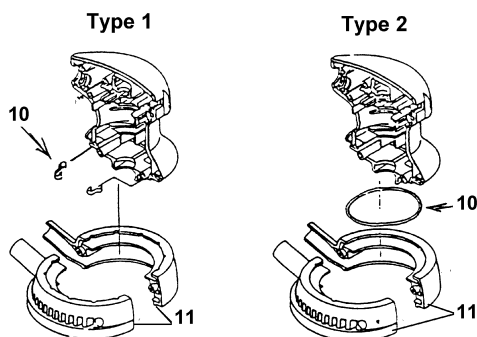

Item No.	Description	Type 1	Type 2
10	Leaf Spring / O Ring 75	232166-0 - Leaf Spring (2pcs)	213755-0 - O Ring 75 (1pc)
11	Skirt Set	182922-7	183088-6

Above parts are completely interchangeable as a set.
Type 2 Sander becomes No Positive Stop function.

2. Change on Ball Bearing.

Item No.	Description	Type 1	Type 2
20	Ball Bearing 6002DDW	211227-9	211236-8

Above parts are completely interchangeable.

To Prevent excess rotation when the Sander is NO LOAD, please change to Type 2 Ball Bearing which is packed with a thinner grease. There is no visual difference between Type 1 & Type 2 Ball Bearings.